Blue-White

Variable Area Flow Meters

Industries, Ltd. Engineering and Technical Data F-460 1/2" and 3/4" Pipe Sizes **F/NPT and Socket Fusion** connections **Rib Guided Float** No Metal in the fluid path

Features:

- Polysulfone meter body resists high temperatures and
- Teflon float and optional PVC, Polypropylene or PVDF adapters for corrosive applications.
- Rib guided float.
- No metal in the fluid path.
- Direct reading permanent scale.

Materials of Construction:

Meter Body:	Polysulfone
Adapters:	PVC (optional Polypropylene & PVDF)
O-ring seals:	Viton® (optional EP)
Union Nuts:	Anodized Aluminum (optional PVC)
Float:	Teflon
Float Stop:	Polysulfone

Specifications:

Max. working pressure:150 PSI (10.3 bar) @ 70° F (21° C) Max. fluid temperature:

PVC adapters:130° F (54° C) @ 0 PSI Polypropylene adapters:150° F (65° C) @ 0 PSI PVDF adapters:210° F (98° C) @ 0 PSI


Full scale accuracy:+/- 2.5%

Calibration fluid:water, specific gravity 1.0


Scale length:4" (100mm)

Maximum pressure drop:2 PSI Approximate shipping wt: ...1 lb. (.45 kg)

Maximum Temperature vs. Pressure



Dimensions:

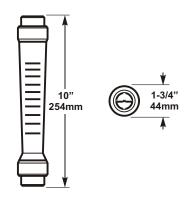

Blue-White

Variable Area Flow Meters

Industries, Ltd.

Installation Requirements:

1. Misalignment will damage the meter!

Flowmeter must be installed in an exact vertical plane to ensure accuracy. Be certain of proper plumbing alignments. Misalignment may cause the o-ring seals to leak. The meterbody material can be damaged by UV rays. Do not install in direct sunlight.

2. Pipe dope and glue will damage the meter!

Use only Teflon® tape on the threaded adapters. The meter body and plastic fittings cannot tolerate PVC Glue and/or pipe dope. Even fumes can cause severe damage. If you are installing your flowmeter to a glued pipe configuration, install the flowmeter after all glued fittings are dried and lines are purged of all fumes. Never hold the meter body with pliers or like tools. Union nuts should be hand tightened only. DO NOT OVER-TIGHTEN!

3. Vibration and heavy loads will damage the meter!


Wall, floor and ceiling mounts and supports must be carefully aligned with the meter body and sturdy enough to support the plumbing and prevent vibration. Never allow the flowmeter to support the weight of related piping.

4. Solenoid valves will damage the meter!

Avoid a system that will impose a sudden burst of flow to the meter. Such a burst will cause the float to impact the float stop with destructive force. Solenoid valves, or other quick opening valves cannot be used unless meter is protected against sudden bursts of flow.

5. High pressures and temperatures will damage the meter!

The maximum acceptable temperature and pressure is interdependent. The maximum acceptable working pressure is dependant on the actual fluid temperature. The maximum acceptable fluid temperature is dependant on the actual working pressure. (see Temperature Vs. Pressure chart).

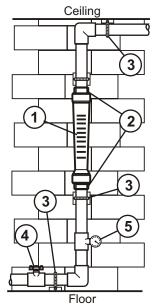

Flow Range and Model Options:

Models with F/NPT connections

- Models for Liquid with PVC adapters

MODEL NUMBER	Dual Sca GPM	le Range LPM	Adapter F/NPT	Float Material	Adapter Material
F-46010LX-08P	0.1 to 1.2	0.4 to 4.4	1/2"	Teflon	PVC
F-46010LX-12P	0.1 to 1.2	0.4 to 4.4	3/4"	Teflon	PVC
F-46020LX-08P	0.2 to 2.0	0.8 to 8.0	1/2"	Teflon	PVC
F-46020LX-12P	0.2 to 2.0	0.8 to 8.0	3/4"	Teflon	PVC
F-46030LX-08P	0.3 to 3.0	1.0 to 11	1/2"	Teflon	PVC
F-46030LX-12P	0.3 to 3.0	1.0 to 11	3/4"	Teflon	PVC
F-46050LX-08P	0.5 to 5.0	2.0 to 20	1/2"	Teflon	PVC
F-46050LX-12P	0.5 to 5.0	2.0 to 20	3/4"	Teflon	PVC

- Models for Liquid with PVDF adapters

MODEL NUMBER	Dual Sca GPM	le Range LPM	Adapter F/NPT	Float Material	Adapter Material
F-46010LX-08K	0.1 to 1.2	0.4 to 4.4	1/2"	Teflon	PVDF
F-46010LX-12K	0.1 to 1.2	0.4 to 4.4	3/4"	Teflon	PVDF
F-46020LX-08K	0.2 to 2.0	0.8 to 8.0	1/2"	Teflon	PVDF
F-46020LX-12K	0.2 to 2.0	0.8 to 8.0	3/4"	Teflon	PVDF
F-46030LX-08K	0.3 to 3.0	1.0 to 11	1/2"	Teflon	PVDF
F-46030LX-12K	0.3 to 3.0	1.0 to 11	3/4"	Teflon	PVDF
F-46050LX-08K	0.5 to 5.0	2.0 to 20	1/2"	Teflon	PVDF
F-46050LX-12K	0.5 to 5.0	2.0 to 20	3/4"	Teflon	PVDF

Models listed above are LX variation = units with Anodized Aluminum unions. LP = units with PVC unions.

Models with Socket Fusion connections

- Models for Liquid with Polypropylene adapters


	•				•
MODEL NUMBER	Dual Sca GPM	le Range LPM	Adapter S.F.	Float Material	Adapter Material
F-46010LX-09G	0.1 to 1.2	0.4 to 4.4	1/2"	Teflon	Polypropylene
F-46010LX-13G	0.1 to 1.2	0.4 to 4.4	3/4"	Teflon	Polypropylene
F-46020LX-09G	0.2 to 2.0	0.8 to 8.0	1/2"	Teflon	Polypropylene
F-46020LX-13G	0.2 to 2.0	0.8 to 8.0	3/4"	Teflon	Polypropylene
F-46030LX-09G	0.3 to 3.0	1.0 to 11	1/2"	Teflon	Polypropylene
F-46030LX-13G	0.3 to 3.0	1.0 to 11	3/4"	Teflon	Polypropylene
F-46050LX-09G	0.5 to 5.0	2.0 to 20	1/2"	Teflon	Polypropylene
F-46050LX-13G	0.5 to 5.0	2.0 to 20	3/4"	Teflon	Polypropylene

- Models for Liquid with PVDF adapters

MODEL NUMBER	Dual Sca GPM	le Range LPM	Adapter S.F.	Float Material	Adapter Material
F-46010LX-09K	0.1 to 1.2	0.4 to 4.4	1/2"	Teflon	PVDF
F-46010LX-13K	0.1 to 1.2	0.4 to 4.4	3/4"	Teflon	PVDF
F-46020LX-09K	0.2 to 2.0	0.8 to 8.0	1/2"	Teflon	PVDF
F-46020LX-13K	0.2 to 2.0	0.8 to 8.0	3/4"	Teflon	PVDF
F-46030LX-09K	0.3 to 3.0	1.0 to 11	1/2"	Teflon	PVDF
F-46030LX-13K	0.3 to 3.0	1.0 to 11	3/4"	Teflon	PVDF
F-46050LX-09K	0.5 to 5.0	2.0 to 20	1/2"	Teflon	PVDF
F-46050LX-13K	0.5 to 5.0	2.0 to 20	3/4"	Teflon	PVDF

Models listed above are LX variation = units with Anodized Aluminum unions. LP = units with PVC unions

Correction factor formulas for AIR models



TEMPERATURE CORRECTION 520 460 + Working Temp °F

Notes:

- 1) Liquid models calibrated with water, Sp.Gr. 1.0. Custom Sp.Gr. calibrations available. Contact the factory.
 2) Air models calibrated at standard Conditions (70°F @ 14.7 PSIa). Temperature and pressure correction may be required. Contact the factory for custom calibrations.

